

# Quick User Guide

## Taylor Dunn B248

\* Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.

### WARNING

These vehicles are not designed to be driven on public roads or highways. They are available in maximum designed speed of 9kph. Do not exceed the maximum designed speed. Exceeding the maximum designed speed may result in steering difficulty, motor damage, and or loss of control. Do not exceed locally imposed speed limited.

### WARNING

1. Make sure the key-switch is in the "OFF" position, then remove the key.
2. Place the forward-reverse switch in the centre "OFF" position.
3. Set the park brake.
4. Place blocks under the front wheels to prevent vehicle movement.



#### Key Switch:

A key-switch is located on the right hand side of the steering wheel & turns the vehicle on/off. Rotate the key clockwise to turn the vehicle power on, counter clockwise to turn power off.

The key switch should be in the "OFF" position whenever the operator leaves the vehicle.

The switch is also designed to secure and disable the vehicle.

The key can only be removed when the key-switch is in the "OFF" position.



#### Horn Switch:

The horn switch is located on the left hand side grip.

Depress the switch to sound the horn, release it to turn it off.



#### The directional control lever:

Located on the right hand side of the instrument panel, determines the direction of travel of the vehicle. Push the top of the switch to engage the forward direction. Push the bottom of the switch to engage the reverse direction.

DO NOT SWITCH from forward to reverse or vice-versa while the vehicle is in motion. Make sure the vehicle is completely stopped before shifting.

The forward-off-reverse switch should be in the centre "OFF" position, with the key-switch turned off and the park brake set when ever the operator leaves the vehicle.



#### Charger cable:

The charger cable is located below the seats and directly goes to 240 Volt.



**Please ensure you are familiar with the manual and the correct operating instructions. If in doubt, please contact supplier before use.**

# Safety Rules and Operating Instructions

## Vehicle Operation Guidelines



### Seat Guidelines

- No person under 18 years of age to drive this vehicle.
- No person without a drivers licence to drive this vehicle.
- Drive slowly when making a turn, especially if the ground is wet or when driving on an incline.
- This vehicle may overturn easily if turned sharply or when driven at high speeds.
- Observe all traffic regulations and speed limits.
- Keep all body parts (head, arms, legs) inside this vehicle while it is moving.
- Keep the vehicle under control at all times.
- Yield right of way to pedestrians, ambulances, fire trucks, or other vehicles in emergencies.
- Do not overtake another vehicle at intersections, blind spots, or other dangerous locations.
- Do not drive over loose objects, holes or bumps.
- Stay in your driving lane under normal conditions, maintaining a safe distance from all objects.
- Keep a clear view ahead at all times.



### Starting

Perform all necessary vehicle preparation steps, inspections or maintenance before operating this vehicle.

1. Make sure the forward-off-reverse switch is in the centre "OFF" position.
2. If equipped with a manual park brake, set the parking brake.
3. Hold down the foot brake.
4. Rotate the ON-OFF switch to the "ON" position.
5. Wait 1 second then place the forward-off-reverse switch in the desired direction of travel.
6. Twist accelerator grip SLOWLY.



### While Driving

- Slow down and sound the horn to warn pedestrians or when approaching a corner or other intersection.
- No reckless driving.
- Do not drive the vehicle on steep inclines or where prohibited.
- Immediately report any accidents or vehicle problems to a supervisor.



### Loading and Unloading:

- Do not carry more than the maximum number of passengers allowed for this vehicle.
- Do not exceed the cargo load capacity.
- Do not load cargo that can fall off.
- Be careful when handling cargo that is longer, wider or higher than this vehicle, be sure to properly secure all loads.



### Towing Loads

- Do not exceed the towing capacity of the tractor
- Do not exceed the load capacity of the trailer.
- Refer to documentation supplied with your trailer for information regarding load capacity of the trailer.
- Make sure all loads are securely tied down. Refer to documentation supplied with your trailer for information regarding attaching loads to the trailer.
- Do not back up when towing more than one trailer.
- Drive slowly when towing loads with a high centre of gravity.
- When turning, be sure to allow for 'corner cutting' of the trailer.
- Allow for longer stopping distances when towing heavy loads.
- Allow for longer stopping distances when driving down a grade.



**Please ensure you are familiar with the manual and the correct operating instructions. If in doubt, please contact the supplier before use.**