

Quick User Guide

Club Car

* Warequip accepts no responsibility for equipment that is operated incorrectly, or not in accordance with operation manuals.

WARNING

These vehicles are not designed to be driven on public roads or highways. They are available in maximum designed speed of 9kph. Do not exceed the maximum designed speed. Exceeding the maximum designed speed may result in steering difficulty, motor damage, and or loss of control. Do not tow this vehicle. Do not exceed locally imposed speed limited.

WARNING

1. Make sure the key-switch is in the "OFF" position, then remove the key.
2. Place the forward-reverse switch in the centre "OFF" position.
3. Press part brake pedal until it locks and holds vehicles.
4. Place blocks under the front wheels to prevent vehicle movement.



Key Switch:

A key-switch is located in the centre of the dash area & turns the vehicle on/off. Rotate the key clockwise to turn the vehicle power on, counter clockwise to turn power off. The key switch should be in the "OFF" position whenever the operator leaves the vehicle. The switch is also designed to secure and disable the vehicle. The key can only be removed when the key-switch is in the "OFF" position.



The directional control lever:

The directional control lever located next to the key switch on the dash, determines the direction of travel of the vehicle. Push the switch down to the correct side to engage the desired location. DO NOT SWITCH from forward to reverse or vice-versa while the vehicle is in motion. Make sure the vehicle is completely stopped before shifting.



Pedals:

The vehicle is operated by 3 foot pedals located on the drivers side floor area. The brake pedal is the large left square pedal. The accelerator pedal is the thin right rectangle pedal. The parking brake pedal is marked with a 'P' and is located at the top left of the brake pedal. Ensure you are familiar with the pedal locations before starting the vehicle.

WARNING! A rolling vehicle can cause serious injury or death. Press part brake pedal until it locks and holds vehicles. Place the forward-reverse switch in the centre "OFF" position

ENSURE VEHICLE IS LEFT IN TRANSMISSION PARK OVERNIGHT ONLY



Please ensure you are familiar with the manual and the correct operating instructions. If in doubt, please contact supplier before use.

Safety Rules and Operating Instructions

Vehicle Operation Guidelines



Seat Guidelines

- No person under 18 years of age to drive this vehicle.
- No person without a drivers licence to drive this vehicle.
- Drive slowly when making a turn, especially if the ground is wet or when driving on an incline.
- Drive only on level surfaces or on surfaces with an incline of no more than 10% (5.6 degrees)
- This vehicle may overturn easily if turned sharply or when driven at high speeds.
- Observe all traffic regulations and speed limits.
- Keep all body parts (head, arms, legs) inside this vehicle while it is moving.
- Keep the vehicle under control at all times.
- Yield right of way to pedestrians, ambulances, fire trucks, or other vehicles in emergencies.
- Do not overtake another vehicle at intersections, blind spots, or other dangerous locations.
- Do not drive over loose objects, holes or bumps.
- Stay in your driving lane under normal conditions, maintaining a safe distance from all objects.
- Keep a clear view ahead at all times.



Starting

Perform all necessary vehicle preparation steps, inspections or maintenance before operating this vehicle.

1. Read the warning label on the beverage holder panel before starting.
2. Be sure all occupants are seated and secured.
3. Select "Forward" or "Reverse".
4. Turn the key switch to "ON".
5. Press the accelerator pedal to start moving (the motor will start and the parking brake will release automatically).
6. Be sure to come to a complete stop before changing "Forward" or "Reverse" direction.



While Driving

- Slow down and sound the horn to warn pedestrians or when approaching a corner or other intersection.
- No reckless driving.
- Do not drive the vehicle on steep inclines or where prohibited.
- Check area behind the vehicle before operating.
- Use extra caution & reduced speed when driving on poor surfaces.
- Immediately report any accidents or vehicle problems to a supervisor.

Note: Never exit the vehicle without performing the full parking procedure.

To park the vehicle, press the 'Parking Brake Pedal' until it locks, pull the hand brake and turn the key switch to the "OFF" position.



Loading and Unloading:

- Do not carry more than the maximum number of passengers allowed for this vehicle.
- Do not exceed the cargo load capacity.
- Do not load cargo that can fall off.
- Be careful when handling cargo that is longer, wider or higher than this vehicle, be sure to properly secure all loads.
- Ensure the vehicle has come to a complete stop before allowing cargo or personnel to enter or exit the vehicle.



Towing Loads

- This vehicle is not designed to tow loads.

Please contact Warequip for an alternative vehicle if towing capability is required.



Please ensure you are familiar with the manual and the correct operating instructions. If in doubt, please contact supplier before use.